

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light.	1. Bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

 
The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**



INSTRUCTION MANUAL

Interior Decorative Lighting

Home Depot SKU (914-236) UPC (773546154970)

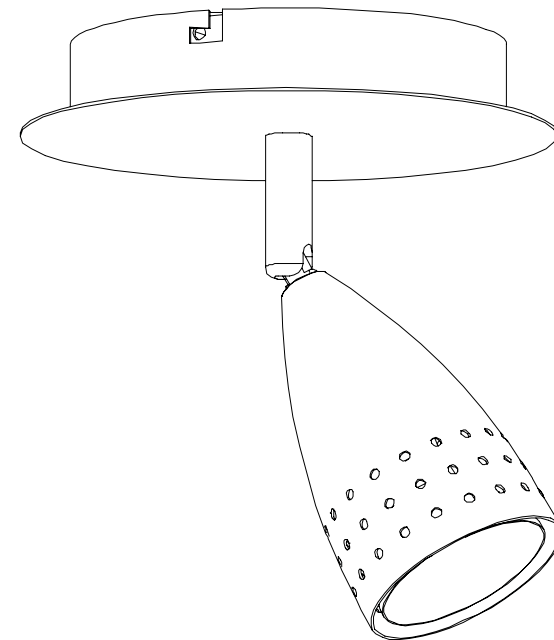

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

Elegant contemporary design, pinhole cut-outs send a sparkle of light outwards.

Fully directional track-style head allows you to aim light where it is needed.

Single head mono-point configuration.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU# (914-236) or UPC# (773546154970).

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU# (914-236) or UPC# (773546154970).
4. Keep your receipt and these Instructions for Proof of Purchase.

 
TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):




Electrical Tape




Safety goggles




Wire Cutters

 

Wire Strippers

 

Flathead Screwdriver

 


Phillips Screwdriver




Ladder

 
ADDITIONAL PARTS (included):



 
2. Wire Nuts (x3)



 3. Mounting Backplate



 4. Mounting Screws (x2)



5. Side Screw (x2)



7. GU10 x 50W Bulb



8. Suction Cup

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; Layout all parts on a clean surface.
2. Turn off power at main fuse box.
3. Install mounting backplate (3) to junction box (1) with 2 mounting screws (4) supplied.
4. Fasten open end of ground wire (bare copper or green wire) to ground wire or ground screw of junction box (1) or ground screw on mounting backplate.
5. Connect black wire of power supply to black wire of fixture and connect white wire of power supply to white wire of fixture.

NOTE: All wire connections should be made with wire nuts (2) or marrettes (included) and pushed back into junction box.

6. Mount canopy of fixture (6) over mounting backplate (3) and secure with 2 side screws (5) supplied.

BULB INSTALLATION:

1. Install 50W max. GU10 bulb (included) (7) into socket using suction cup (8) and twist lock into place.

ASSEMBLY:

