


INSTALLATION INSTRUCTIONS

SML-362

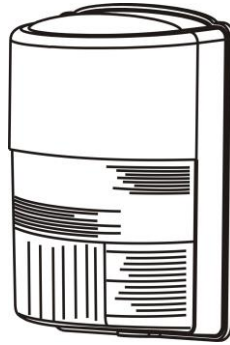

WARNING:

THIS PRODUCT CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND / OR OTHER REPRODUCTIVE HARM. THOROUGHLY WASH HANDS AFTER INSTALLING, HANDLING, CLEANING OR OTHERWISE TOUCHING THIS PRODUCT.


SAFETY PRECAUTION:

Warning: risk of fire and electrical shock! Before beginning installation or service, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not sufficient to prevent electrical shock. This floodlight is for outdoor use and should not be used in areas of limited ventilation or high ambient temperature. All work should be performed by a qualified electrician. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

INSTALLATION:

Direct wall mounting to recessed box:

1. Remove the plastic lens by unscrewing the two Phillips head screws at the bottom of the fixture.
2. Unplug the wires from the LED module (A) to the driver area (B).
3. Remove the LED module by loosening the two screws (C). Be careful to not touch the LEDs. Place the LED module face up on a clean, dry surface. **Do not drop the LED module.**
4. Punch or drill out the desired holes in the baseplate for mounting.
5. Fasten the rear housing to the recessed outlet box or other mounting surface using the provided gasket.
6. If using branch circuit power leads from the junction box, splice them to the fixture power leads: black to black (hot), white to white (neutral), and green to green (ground). Push the splices into the junction box.
7. If using an electrical conduit, knock out the conduit hole in the base of the fixture and route the conduit to it. Bring the branch circuit power leads into the fixture and splice as described in step 6.
8. Reinstall the LED module, plug it back in, and remove the protective cover.
9. Reinstall the plastic lens.
10. For wet locations, caulk between rear gasket and mounting surface to prevent water from entering the fixture from behind. Use caulk to seal around the edges of the housing where it meets the mounting surface.

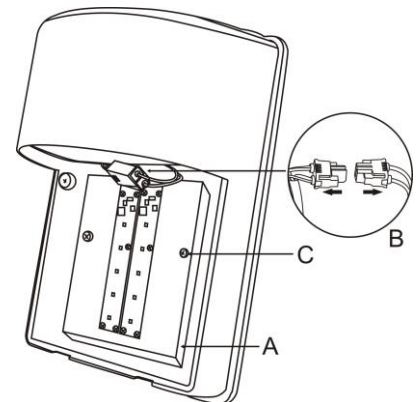

Note: The LED driver in this unit operates in the range of 120 to 277 VAC. No additional tap wires are needed.

TROUBLE SHOOTING CHECKLIST : If the light does not work.

Check your power source.

Check the electrical connections.