INSTALLATION AND SERVICE INSTRUCTIONS

SMALL FLOODLIGHT SERIES





PRECAUTION:

- Read instructions carefully before attempting to install fixture. Retain instruction for future reference.
- Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- Proper grounding is required to ensure personal safety.
- All wiring should be performed by a qualified electrician. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures.

AVERTISSEMENT:

S'assurer que toute alimentation possible est COUPE'E avant de commencer l'installation ou l'entretien.


Tout le ca'blage doit e'tre fait par un e'lectrician vertifi'e.

Junction Box Mounting:

- 1. Secure the fixture to the outdoor junction box cover.
- 2. Secure the junction box cover with fixture to the junction box, make sure all the wires are contained inside the junction box and the cover is properly gasketed to prevent entrance of moisture.



- 1. Rotate fixture in horizontal plane to desired area to be Illuminated. Secure in position with locknut.
- 2. Set vertical aiming by loosening bolt. Aim fixture at desired Angle and securely re-tighten bolt.

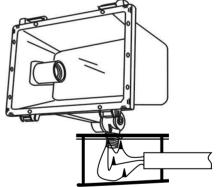

WIRING:

See the ballast wiring label and the rating label to locate the power tap to the appropriate voltage tap.

If supplied with a single voltage tap, make sure the voltage furnished to the

fixture is the same as specified on the unit.

Make sure all unused ballast taps are capped to avoid a short circuit to the reflector when

The fixture is energized

REPLACING LAMP:

- 1. When re-lamping, turn power off and allow the fixture to cool.
- 2. Prior to installing the lamp in the fixture, check the lamp is of proper type and wattage. Screw the lamp securely into the socket, back the lamp out one to two turns, then secures the lamp back in, making sure it is secured. This properly seats the lamp in the socket.
- 3. Close the door frame and screw securely. Be sure that the gasket is firmly seated in the proper
- 4. Channel prior to closing fixture to maintain weather-tight seal.

TROUBLE SHOOTING CHECKLIST: If the light does not work.

Check electrical connections. Check your power source.

Check to insure proper seating of lamp. Check if lamp burned out.

