


# INSTALLATION AND SERVICE INSTRUCTIONS SML717

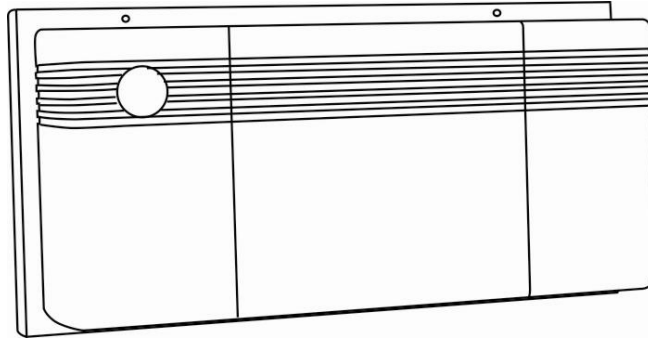

## SAFETY PRECAUTION :

Before starting the installation, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not sufficient to prevent electrical shock. This fixture is for indoor / outdoor use and should not be used in areas of limited ventilation or high-ambient temperature. All work should be done by a qualified electrician.

Fixture should be wall or ceiling mounted. Fixture should be located at least 18" below any overhang or other structural detail. Fixture should not be recessed.

## INSTALLATION :

1. Remove lens from the back of fixture.
2. Attach universal crossbar to junction box with two screws provided.
3. Thread mounting nipple ( provided through center hole)
4. Connect fixture leads to supply leads with wire nuts.
5. Relocate the lens.

NOTE: It is recommended that all the unused entries must be plugged. Use weatherproof silicone sealant to insure proper seal.

## WIRING :

**This LED fixture can be wired from 120 to 277V**, there is no other voltage tap provided. The end-user is not supposed open the fixture once installed.

## CAUTION:

The LED lens can not be touched by hand when installation.

## TROUBLE SHOOTING CHECKLIST : If the LED light does not work.

Check your power source.

Check electrical connections.